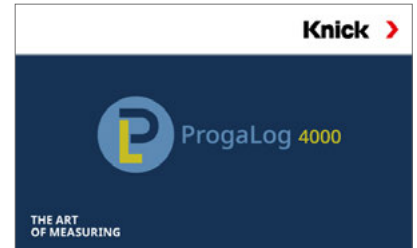


HeadquartersBeuckestr. 22 • 14163 Berlin
GermanyPhone: +49 30 80191-0 • Fax: +49 30 80191-200
info@knick.de • www.knick.de**Local Contacts**

www.knick-international.com

Installationsanleitung
Installation GuideProgaLog 4000
PC-Parametriertool für Transmitter
PC configuration tool for transmitters

Copyright 2021 • Subject to change

This document was last updated on Nov. 18, 2021

The latest documents are available for download on our
website under the corresponding product description.

099231 TI-201.016-KNXX01

Vor Installation und Verwendung lesen.

Für künftige Verwendung aufbewahren.

Read before installation and use.

Keep for future use.

www.knick.de

**Lizenzschlüssel**

Die PC-Software ProgaLog 4000 startet nach der Installation zunächst im DEMO-Modus.

Mit der Eingabe des Lizenzschlüssels wird der DEMO-Modus beendet. Die
PC-Software steht vollumfänglich zur Verfügung.**License key**Following installation, the ProgaLog 4000 software initially starts in DEMO
mode.Entering the license key terminates DEMO mode. The PC software is fully
available.**Lizenzschlüssel • License key**

Voraussetzungen

Hardware

- CPU: 1 GHz Pentium oder vergleichbarer Prozessor
- RAM: 512 MB
- Grafikkarte: 1024 x 768 True Color, 32-Bit
- USB 2.0
- Festplatte: 700 MB

Betriebssystem:

- Windows 7*/8/10 (32-Bit- und 64-Bit-Version)
- Microsoft .Net Framework 4.6
(in Windows 8/10 bereits enthalten)

*) Bei Verwendung eines PCs mit Windows 7 stellen Sie vor dem Installieren von ProgaLog 4000 sicher, dass Microsoft .Net Framework 4.6 installiert ist (kostenloser Download unter www.microsoft.com)

Installation von ProgaLog 4000

01. USB-Stick mit einem USB-Anschluss des Computers verbinden.
02. Datei **ProgaLog4000Setup.exe** vom USB-Stick aus ausführen.
03. Installationssprache auswählen.
04. Den Angaben auf dem Bildschirm folgen.
05. Installation fertigstellen.
06. Starten der Software durch Doppelklick auf **ProgaLog-4000Setup.exe**. Beim ersten Mal startet die Software im DEMO-Modus.
07. Zum Beenden des DEMO-Modus Lizenzschlüssel eingeben.

Dokument gültig ab ProgaLog 4000, SW-Version 1.0.0

System Requirements

Hardware

CPU: 1 GHz Pentium or comparable processor

- RAM: 512 MB
- Graphics card: 1024 x 768 true color (32-bit)
- USB 2.0
- Hard Disk: 700 MB

Operating system:

- Windows 7*/8 or 10 (32-bit or 64-bit version)
- Microsoft .Net Framework 4.6
(already included in Windows 8/10)

*) If you have a PC with Windows 7, first make sure that Microsoft .Net Framework 4.6 (free download from microsoft.com) is installed before you start the ProgaLog 4000 installation.

Installing ProgaLog 4000

01. Connect the USB stick to a USB port on the computer.
02. Run the file **ProgaLog4000Setup.exe** from the USB stick.
03. Select the installation language.
04. Follow the instructions on the screen.
05. Complete the installation.
06. Start the software by double-clicking on **ProgaLog4000Setup.exe**. The first time, the software starts in DEMO mode.
07. Enter the license key to terminate DEMO mode.